

Visit
klicko.ia
for more
information



User Manual

Product Warranty
Instructions:

Please fill in the following information and affix the official seal of the sales unit.

User information: _____
User name: _____
Phone: _____
Address: _____
Postal code: _____
Place of purchase: _____
Selling price: _____
Sales order number: _____
User signature: _____
Dealer signature: _____

The contents of this document may not be modified without authorization.
Keep the product box to protect your legal rights.

Place of origin: China
Made in China

2.4G Mode Setup:

- Turn on the computer.
- Plug the mouse receiver into the USB port.
- Switch the mouse button to "ON".
- Press the mode selector button to 2.4G until the green light appears for 5 seconds.
- Once the light goes off, the device is ready for normal use.

You can connect up to 3 computers separately without re-pairing:

- Turn on your PC and enable Bluetooth.
- Turn on the mouse (switch to "ON").
- Press the Bluetooth/2.4G button to select BT1 or BT2 (blue light).
- Check if the device name "AI Office Mouse" appears in the Bluetooth list.
- Press and hold for 3-5 seconds until it flashes rapidly, then pair with "AI Office Mouse."
- Once connected, the blue light remains steady, and the mouse is ready for use.



Mode Switching:
Press the Bluetooth / 2.4G switch button to toggle between 2.4G, BT1, or BT2.

Driver Installation:

- Windows and MacOS: go to <https://www.midlink.net/AIOFFICE/> and download the software.
- Double-click the package and follow the installation steps.
- The software icon will appear in the bottom taskbar. **AI**
- If antivirus software blocks the startup, manually allow the program to run.
- You can also scan the QR code to access the mouse usage instructions.


Charging Method:

- Use the USB port of your PC or a 5V power source with the mouse cable.
- The blue light flashes while charging and stays on when fully charged (about 1 hour).
- Do not use fast chargers.

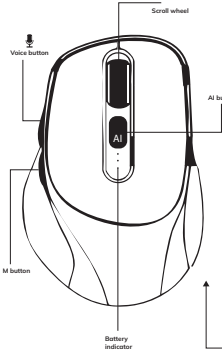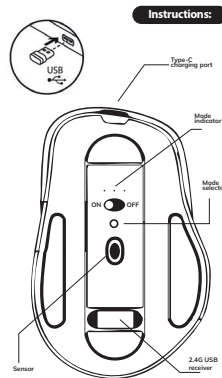


Identify the mouse buttons on the diagram.


Identify the mouse buttons on the diagram.

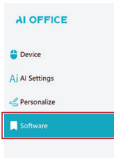


Platform Language

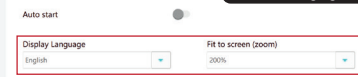

Select the language in which the mouse software will operate.
You can also adjust the popup window size.

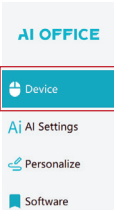



Function Configuration

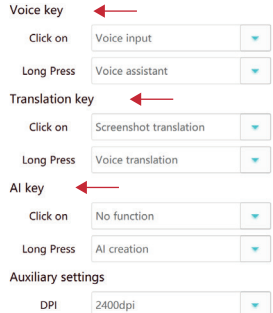

Set the buttons as shown in the image:
Voice Key
Translation Key / M Button
AI Button / AI key

The buttons will execute according to the configured settings.
You can customize them from the dropdown options menu.

AI OFFICE

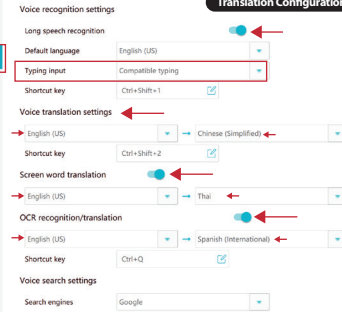
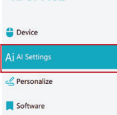


Make sure to enable the mouse features and "compatible typing mode" for proper operation across platforms.
Before using the translation function, select the source language (your spoken language) and the target language (the language you want to translate into).

AI OFFICE



Customization

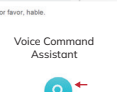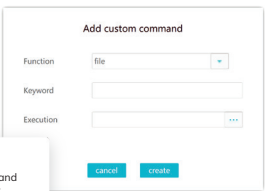

You can create voice commands to perform specific actions with the mouse.
Note that the "Voice Assistant" must be assigned to the voice button.

Voice Dictation



Select the window or area where you need to input text, click the **Voice Button** once, and start speaking. The mouse will begin transcribing your speech.

Voice Translation

Select the window or area where you need text, hold down the **M Button** while speaking. The mouse will transcribe into the selected language.

You can use this tool in documents, chat windows, emails, and more. **Always adjust the source and target languages as needed.**

In both cases, a small popup will appear in the lower right corner of the screen, indicating that the function is active.

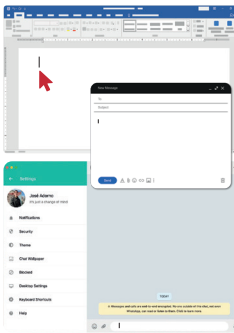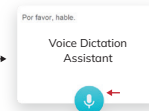

Screenshot Translation

In the area you want to translate, click the **M Button** briefly; the screen will flash for a second, capturing the screenshot. Then, using the left mouse button, you can select the specific text and translate it through the popup panel button.


A popup window will appear showing the original text and its translation. You can select other languages from the dropdown menu.

This function works with both text and images; **always adjust the source and target languages as needed.**



You can also save screenshots of specific areas.

Screen Word Translation

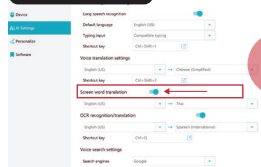

When this function is enabled, the mouse detects the language and translates instantly. Highlight the text and click the floating button to see the translation in a popup window. You can change the target language from the dropdown menu.

AI Function

Click the **AI Button** in the center of the mouse or access it through the mouse interface.

AI Assistant

Type your request at the bottom and press send. ChatGPT will display the requested results.

AI PPT

Describe the presentation you want to create and select "Create PPT Outline." Then click "Generate Main Text" for AI to draft the content. Once ready, select a PPT template and download it to your computer.

AI Drawing

Describe the image you want to create and press send. The image will be generated within seconds.

AI Writing

Describe the article you want to write and press send. The system will generate an outline within seconds. Then click "Main Text" to generate the full article.

AI Mind Map

Enter the description of the content you want to generate and press send. The system will generate the outline. Click "Mind Map" in the lower-right corner, choose your preferred format, and download it.

AI Table

Enter the description of the table you want to create and press "Send." The system will generate the requested table. You can click Word or Excel in the lower-right corner to download it in the desired format, or select "Chart" to create a visual representation.



This function automatically detects the language, which may slow down the mouse. Enable this feature only when needed.



FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

Important Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.



คู่มือผู้ใช้
ใบรับประกันสินค้า

ข้อมูลผู้ใช้: _____
ชื่อผู้ใช้: _____
โทรศัพท์: _____
ที่อยู่: _____
รหัสไปรษณีย์: _____

สถานที่ซื้อ: _____
ราคาขาย: _____
หมายเลขคำสั่งซื้อ: _____
ลายเซ็นผู้ใช้: _____
ลายเซ็นตัวแทนจำหน่าย: _____

เนื้อหาในเอกสารฉบับนี้ห้ามแก้ไขโดยไม่ได้รับอนุญาต
หากต้องการข้อมูลเพิ่มเติมโปรดติดต่อฝ่ายบริการลูกค้าของเรา

แจ้งให้ทราบ: กรุณาอ่านคู่มือการใช้งานก่อนใช้งาน

การติดตั้ง: กรุณาอ่านคู่มือการใช้งานก่อนใช้งาน

การเชื่อมต่อ: กรุณาอ่านคู่มือการใช้งานก่อนใช้งาน

การตั้งค่า: กรุณาอ่านคู่มือการใช้งานก่อนใช้งาน

การอัปเดต: กรุณาอ่านคู่มือการใช้งานก่อนใช้งาน

การตั้งค่าในโหมด 2.4G
-เปิดคอมพิวเตอร์
-เสียบตัวรับสัญญาณของเมาส์เข้ากับพอร์ต USB
-ปรับสวิตช์ของเมาส์ไปที่ตำแหน่ง "เปิด"
-กดปุ่มเลือกโหมด 2.4G ตั้งไว้จนไฟสีเขียวปรากฏ
ประมาณ 5 วินาที
-เมื่อไฟดับ อุปกรณ์สามารถใช้งานได้ตามปกติ

เมาส์จะเข้าสู่โหมดสลีปเมื่อไม่มีการใช้งาน; ขยับ
เมาส์หรือกดปุ่มใด ๆ เพื่อปลุกให้ทำงาน
-เข้ากันได้กับระบบปฏิบัติการ Win7-11 และ
MacOS

คุณสมบัติ:
-โหมด Bluetooth / 2.4G เพื่อเลือกโหมด 2.4G,
BT1 หรือ BT2

การติดตั้งไดรเวอร์:
-สำหรับ Windows และ MacOS: เปิดเว็บไซต์
<https://www.midclick.net/AIOFFICE/>
แล้วดาวน์โหลดซอฟต์แวร์
-คลิกปุ่มดาวน์โหลดแล้วทำตามขั้นตอนการติดตั้ง
-ไอคอนของซอฟต์แวร์จะปรากฏบนเดสก์ท็อป
-หากโปรแกรมยังไม่ทำงาน ให้คลิกปุ่ม AI
-หากโปรแกรมยังไม่ทำงาน ให้คลิกปุ่ม AI

วิธีการชาร์จ:
-ใช้พอร์ต USB ของคอมพิวเตอร์หรือแหล่งจ่ายไฟ 5V
หรือสายชาร์จของเมาส์

การเชื่อมต่อ:
-ไฟฟ้านี้จะเชื่อมต่อระหว่างขั้วและจะติดกับเมาส์
หรือเมาส์ (ใช้เวลาประมาณ 1 ชั่วโมง)

การอัปเดต:
-หากไม่ใช้วิธีอื่น

